

Nikon Z 7II / Z 6II Experience

The Still Photography Guide to Operation and Image Creation with the Nikon Z 7II and Nikon Z 6II

an e-book by:
Douglas J. Klostermann



Updated for
Firmware v. 1.31

PREVIEW of
Nikon Z 7II / Z 6II Experience

The Still Photography Guide to Operation and Image
Creation with the Nikon Z 7II and Nikon Z 6II

Updated for Firmware Version 1.31

by
Douglas J. Klostermann

Full Stop. good writing for better photography

All rights reserved. This e-book is licensed for your personal enjoyment only and may not be re-sold, file-shared, distributed, sub-licensed, or given away. This book can be printed for your personal use (PDF version) and read on your personal devices. Otherwise no part of this book may be reproduced or transmitted in any form or by any means, electronically or in print, without expressed permission from the author. Every effort has been made to make this e-book as accurate as possible, but no warranty of fitness is implied. The information is provided on an as-is basis. The author shall have no liability or responsibility with respect to any loss or damages arising from the information provided in this e-book including but not limited to the use of any of the materials or methods described, the products, retailers, Internet web sites, or links provided. Please read and follow all instructions and use, safety and handling precautions expressed in the manuals provided with your equipment and software, and which take precedence over any content in this work.

All contents including cover design, text, and photographs, with the exception of products, brands, logos, and contents of menus and screenshots, are copyright by the author, except as noted. All products, brands, logos, and contents of menus and screenshots are property of the respective companies and websites. Terms which are trademarks or service marks in this e-book are used in an editorial and educational manner, and should not be regarded as affecting the validity of any trademark or service mark. *Nikon, Z 7II, and Z 6II* are trademarks of *Nikon Inc.* *Adobe, Photoshop, and Lightroom* are trademarks of *Adobe Systems Inc.* The author and the contents of this book are not affiliated with or endorsed by *Nikon*.

Douglas Klostermann is a participant in the Amazon Services LLC Associates Program, an affiliate advertising program designed to provide a means for sites to earn advertising fees by advertising and linking to amazon.com. (Links are provided to products and accessories mentioned in this guide.)

Cover design and photograph by the author. All photographs by the author, with the exception of select *AI/ Non-AI lens* photographs by Andrew Martin of www.smallcirclestudio.com

Special thanks to **Newtonville Camera** of Waltham, Mass.
<https://newtonville.camera>



Douglas Klostermann is a participant in the Amazon Services LLC Associates Program, an affiliate advertising program designed to provide a means for sites to earn advertising fees by advertising and linking to amazon.com. (Links are provided to products and accessories mentioned in this guide.)

Nikon Z 7II / Z 6II Experience

The Still Photography Guide to Operation and Image Creation with the Nikon Z 7II and Z 6II

by: Douglas J. Klostermann

PDF Version 1.0 - **PREVIEW**

April 2022

Published by Full Stop Media. *good writing for better photography*

Arlington, Massachusetts, USA

www.fullstopbooks.com

Copyright 2022 Douglas J. Klostermann / Full Stop Media, LLC - all rights reserved.

Author's website: www.dojoklo.com

Author's blog: <http://blog.dojoklo.com/>

Facebook: <https://www.facebook.com/groups/nikonz7z6z5/>

CONTENTS

1. INTRODUCTION to the Z 7II and Z 6II	7
1.1 Take Control of Your Camera	10
1.2 Using This Guide	13
1.3 Getting Started	17
1.4 New Features and “Hidden” Features of the Z 7II and Z 6II	19
2. CAMERA CONTROLS	35
3. MENUS and CUSTOM SETTINGS	49
3.1 Setting Up the Z 7II and Z 6II	49
3.2 Setup Guide Spreadsheet	50
3.3 Playback Menu	51
3.4 Photo Shooting Menu	60
3.5 Movie Shooting Menu - Intro	92
3.6 Custom Setting Menu	93
a - Autofocus	94
b - Metering/Exposure	102
c - Timers/AE Lock	106
d - Shooting/Display	109
e - Bracketing/Flash	118
f - Controls	122
g - Movie	142
3.7 Setup Menu	150
3.8 Retouch Menu	176
3.9 My Menu	182
4. PLAYBACK, INFORMATION DISPLAY, and IMAGE FILE FORMATS	184
4.1 Using the Monitor and Electronic Viewfinder	184
4.2 Image Playback	185
4.3 Information Display and i Menus	191
4.4 JPEG and NEF (RAW)	200
4.5 File Sizes and Maximum Continuous Burst	207
5. AUTOFOCUSING	210
5.1 Using Autofocus	210
5.2 Focus Modes	215
5.3 Manual Focus	220
5.4 Autofocus AF-Area Modes	223
5.5 Locking Focus	233
5.6 Back-Button Focusing	234
5.7 Trap Focus	240
6. RELEASE MODES	243
7. EXPOSURE Part 1	249
7.1 Aperture, Shutter Speed and ISO	249
7.2 Aperture-Priority Auto Mode and Shutter-Priority Auto Mode	256
7.3 Full Stops	265
7.4 Manual Exposure Mode, Bulb, and Time	266

7.5 Auto and Programmed Auto Exposure Modes.....	270
7.6 Live View and Viewfinder Exposure Display	272
8. METERING MODES	274
8.1 Matrix Metering	275
8.2 Center-Weighted Metering	276
8.3 Spot Metering	279
8.4 Highlight-Weighted Metering	281
8.5 Manual Metering.....	283
8.6 Metering Modes and Exposure	284
9. EXPOSURE Part 2	287
9.1 Exposure Lock.....	287
9.2 Histograms.....	291
9.3 Exposure Compensation	296
9.4 Auto Bracketing	301
9.5 HDR (High Dynamic Range)	307
9.6 Active D-Lighting	310
9.7 Multiple Exposures	312
10. ADDITIONAL CAMERA FUNCTIONS	317
10.1 White Balance	317
10.2 Picture Controls	325
10.3 Creative Picture Controls	334
10.4 Interval Timer Shooting	335
10.5 Sensor Cleaning	339
10.6 Putting It All Into Practice	339
11. FLASH	341
11.1 Flash Control Modes	341
11.2 Flash Modes	344
11.3 Flash Custom Settings Options.....	346
11.4 Wireless Flash	349
12. THE IMAGE TAKING PROCESS.....	357
12.1 Still Subjects	357
12.2 Moving Subjects	359
13. VIDEO - MOVIE SHOOTING	362
13.1 Introduction to Video - Movie Shooting	362
13.2 Movie Shooting Menu Options	365
13.3 Additional Movie Shooting Features	385
13.4 Movie Exposure Settings.....	388
13.5 Movie Playback and Editing	392
13.6 Time-Lapse Movie	395
14. BLUETOOTH, Wi-Fi, and SNAPBRIDGE.....	399
15. COMPOSITION.....	412
16. LENSES	422
16.1 Lens Compatibility of the Z 7II and Z 6II	422
16.2 Using AF and AI Lenses With the Z 7II and Z 6II.....	426

16.3 Nikon (NIKKOR) Lens Notations	427
17. PHOTOGRAPHY ACCESSORIES	433
17.1 Nikon Z 7II and Z 6II Accessories	434
17.2 Digital Photography Accessories.....	436
17.3 Digital Photography Books	440
18. CONCLUSION	441
Future Updates to the Text.....	442
About the Author.....	444

1. INTRODUCTION to the Z 7II and Z 6II

Following the success of their first full-frame mirrorless cameras, the Nikon Z 7 and the Nikon Z 6, Nikon has updated and improved these models and released the Nikon Z 7II and the Nikon Z 6II. While both make use of a backside-illuminated CMOS sensor, the Z 7II is a higher-resolution model boasting 45.7 megapixels, and the Z 6II is a 24.5 megapixel model. Both cameras now include dual processors, two memory card slots, and new face and eye detection autofocus modes. The two cameras share most of the same controls, features, and menu options, though there are some important differences in addition to the sensor resolution including the ISO range, continuous frame rates, and image buffer size. And while they both have hybrid autofocus systems, which make use of phase-detection AF and contrast-detection AF, the autofocus system of the Z 7II has 493 AF points, while the Z 6II has 273 AF points. With the AF points spread widely across nearly the entire frame, both cameras will allow you to focus on and track subjects, faces, and eyes throughout most of the scene, including animal detection of cats and dogs.



Figure 1.1 - Detail of the Nikon Z 7II full-frame mirrorless camera, with the 24-70mm f/4 S lens.

Both models offer great image quality at high ISO settings for low-light shooting, with the native ISO range of the Z 7II at 64 - 25,600, and the native ISO range of the Z 6II at 100 - 51,200. Both are expandable to slightly lower, and much higher ISO settings, up to 102,400 (Z 7II) and 204,800 (Z 6II). Both models offer in-camera 5-axis image

stabilization for Z-mount lenses, which can be enabled for both stills and video shooting, plus 3-axis image stabilization is available with F-mount lenses attached via the FTZ or FTZ II Adapter. And they both make use of dual Expeed 6 processors, which enable improved features including significantly increased image buffers, faster continuous shooting, improved low light focusing down to -3EV, and reduced viewfinder blackout. The fast processors also enable features introduced in the original Z 7 and Z 6 including the mid-range sharpening adjustment for Picture Controls, diffraction compensation ideal for use with small apertures in landscape shooting, Creative Picture Controls, and in-camera batch RAW processing.

The Z 7II and the Z 6II both offer fast continuous shooting for capturing bursts of images in action situations. The Z 7II is capable of up to 10 frames per second (fps), while the Z 6II boasts a faster 14 frames per second. However, in order to achieve this rate with focus and exposure updated for each image in the burst, you must be using either manual focus, AF-S, or AF-C with Single-Point AF-Area Mode. Otherwise the maximum frame rate will be 9 fps (Z 7II) or 12 fps (Z 6II) when capturing JPEG or 12-bit RAW, or else 8 fps (Z 7II) or 9 fps (Z 6II) when capturing 14-bit RAW. Depending on the RAW bit-rate and compression settings, the bursts can be maintained for up to 82 images for the Z 7II, and 200 images for the Z 6II. And a Silent Photography mode will allow you to shoot in sensitive situations, with no shutter sounds and no wear on the mechanical shutter. A new Focus Shift Shooting mode allows you to automatically shoot up to 300 images of a scene at varying focus distances, which can be combined into a focus-stacked image, using optional software.

The cameras include dual card slots, one slot for either CFexpress or XQD memory cards, and one for UHS-II SD cards. The two card slots allow for various card slot configurations such as overflow to the other card when one fills, or simultaneously saving all images to both cards for backup, and well as a Copy function to copy saved images from one card to the other. The Z 7II and Z 6II use the new EN-EL15c battery, though they are compatible with previous versions of the EN-EL15. The cameras can now be charged or powered over their USB-C port, and they accept the optional MB-N11 battery grip, which holds two batteries as well as offers duplicated controls for vertical shooting.

Most of the camera controls and the touch screens of these mirrorless models are similar to what you may be used to with a Nikon dSLR, and are the same as the original Z 7 and Z 6. The Sub-Selector joystick is used to quickly select the desired autofocus point while shooting, and can be used as a focus lock and exposure lock button when pressed straight in. It can even be customized to perform functions such as temporarily switching to a different Metering Mode during shooting. The touch screen can be used for menu selection, image playback, as well as for adjusting exposure settings, autofocus, and shutter release. And the 3.2" high-resolution (2.1M dot) rear monitor tilts to assist shooting from unique high and low vantage points. The inclusion of the i Button, now standard on current Nikon models, allows photographers to quickly access mode-specific settings, whether shooting through the viewfinder, working on the rear monitor, in movie mode, or during image playback.



Figure 1.2 - Vintage Bicycle - Concord, Mass. Nikon Z 7II with 24-70mm f/4 S lens, Shutter speed 1/100, Aperture f/4.0, ISO 100.

The electronic viewfinder of mirrorless cameras differs from the optical viewfinder of a dSLR. The high-resolution (3.69M dot) OLED viewfinder, with 100% coverage, will enable you to preview the exposure, white balance, Picture Control settings, and depth of field of the final image, as you shoot, as well as make use of a virtual horizon to keep your images level. You can also make use of the customizable i Menu in the viewfinder, so that you can change numerous camera settings without taking the camera from your eye. And you can utilize focus peaking and scene-magnification in the viewfinder, as well as the electronic Rangefinder function, to assist with manual focusing.

Filmmakers will be able to take advantage of the numerous video improvements, including 4K Ultra High Definition (UHD) video in addition to Full HD frame rates and sizes, with the 4K UHD video making use of the entire width of the sensor at 30p, 25p, and 24p. The Z 7II can record 4K at 60p/50p with a small 1.08x crop. With firmware update 1.10, the Z 6II now offers 4K at 60p/50p with an APS-C crop. Both the Z 7II and the Z 6II offer 1920x1080 Full HD at 120p/100p, in order to create slow motion video in post-production. There is also a Full HD Slow-motion option that captures at 4x the frame rate for 30p and 25p, and 5x the frame rate for 24p. The Z 7II and Z 6II offer 10-bit *N-Log* or *HDR (HLG)* HDMI output, when recording to an optional external device, enabling you to capture a wide dynamic range, as well as *View Assist*, to help to preview the appearance of the final video. Nikon offers a paid service for the Z 7II and Z

6II to provide RAW video, and firmware update 1.10 enables 4K Raw to be recorded to an external recorder encoded as either ProRes Raw or Blackmagic Raw.

The Z 7II and Z 6II include focus peaking for manual focusing, 5-axis sensor-based *Vibration Reduction* with Z-mount lenses, plus *Electronic Vibration Reduction* for additional stabilization. Audio features include built-in stereo microphones with selectable frequency ranges and an attenuation option. The *Flat Picture Style* is designed to retain shadows and highlights for post-production, and *Highlight Display* “zebra stripes” can be enabled for displaying overexposed areas of the scene when viewed on the camera’s Monitor. The *Power Aperture* feature will allow cinematographers to smoothly change the aperture size while recording to either an external device or to the memory card. The Z 7II and Z 6II also offer 4K Time-Lapse Movie shooting. The Z 7II is capable of 8K time-lapse video by using the Interval Timer feature to capture still images that will be combined into an 8K time-lapse using optional software.

The Z 7 and Z 6 cameras introduced the Z-mount lens mount, which continues to be used on the Z 7II and the Z 6II. Several Z-mount lenses are now available, as well as an F to Z ([FTZ II](#)) mount adaptor which enables you to use many of your F-mount Nikkor lenses. The wider Z-mount design allows for lenses with extremely wide maximum apertures, such as the [NIKKOR Z 58mm f/0.95 S Noct](#). In addition, the Z 7II and Z 6II include a ruggedly built, weather-sealed magnesium alloy body, Wi-Fi and Bluetooth capabilities through Nikon’s SnapBridge app, and numerous customization options.

The high-resolution image sensors of these cameras, along with their highly versatile and customizable autofocus systems, on-sensor exposure metering with scene recognition and face detection, and fast continuous frame rates will serve the needs of dedicated photographers of every level, from enthusiasts to professionals. The advanced features and customizable controls of the Nikon Z 7II and Z 6II will enable photographers to consistently capture sharp, clean, and well-exposed images in a wide range of shooting situations.

But the Z 7II and Z 6II are merely tools. It is up to you to make use of their features and capabilities to create the images you envision. While the camera manuals can tell you about all the settings and controls, how to change them, and their intended functions, this guide will build upon that and explain when and why you may wish to use them. All of the buttons, dials, menu items, and Custom Settings of the Z 7II and Z 6II are there for a reason: to help you consistently capture the images you want. Some of them are more useful to different types of photographers and shooting situations, and you don’t necessarily need to learn and use them all immediately, but this guide will help to give you the knowledge to confidently use the features that turn your Nikon Z 7II or Z 6II into an image capturing tool that works best for you.

1.1 Take Control of Your Camera

Since the camera is a tool to take the images you want to take, you obviously can’t always allow the camera to make decisions for you. You have to take control of the

camera to ensure that you capture exactly the images you intend - by autofocusing precisely where you intend, setting the aperture and shutter speed that you want, and obtaining the exposure you desire. While the Z 7II and Z 6II are intelligent cameras, they cannot read your mind and your intentions and do not know that you wish to focus on and properly expose the leaves in the foreground, while making the background appear out of focus, and the leaves to be caught still and not be blurred from the motion of the wind, on a bright, overcast day (see *Figure 1.3*).



Figure 1.3 - Leaves and Snow, Whipple Hill, Lexington, Mass. Focus Modes, exposure metering mode, aperture, shutter speed, ISO, and white balance all considered, even in creating this straightforward image. Nikon Z 7II with 24-70mm f/4 S lens, Shutter speed 1/1000, Aperture f/4.0, ISO 200.

You have to tell the camera to do all of this, through the various controls and settings, such as the Focus Mode and AF-Area Mode (lock focus on the desired leaves), the exposure metering mode (properly expose the leaves and the scene), the aperture setting (the out-of-focus background), the shutter speed (freezing the motion of the leaves from the wind), the ISO (bright day) and the white balance (overcast day). Taking control of all of these functions and settings will enable you to consistently create the dramatic and compelling images you envision.

Learning to use and get the most out of an advanced digital camera like the Z 7II or the Z 6II takes time, practice, patience, mistakes, and experimentation. If you are used to working with a dSLR, there will be some adjustments to using a mirrorless camera,

including the electronic viewfinder and the autofocus system. However, you may find that these differences can help you to successfully capture scenes and situations that you may have been limited in consistently attaining before. The sophisticated and accurate autofocus systems of the two cameras, coupled with their fast continuous shooting speed, plus their exposure metering system and high ISO capabilities will help you get sharp images of subjects and moments that previously you may have missed.



Figure 1.4 - Colonial Inn - Concord, Mass. Nikon Z 7II with 24-70mm f/4 S lens, Shutter speed 1/1600, Aperture f/4, ISO 100.

If you are still in the process of learning all the controls of your camera and the exposure concepts of digital photography, you have perhaps jumped into the proverbial deep end of the pool by choosing the advanced Z 7II or Z 6II! But don't worry, this book will help guide you through their features, controls, and capabilities. Be sure to take it slowly and patiently as you learn the features and concepts that I will explain. With practice and experience you will soon be shooting with confidence and can begin to take advantage of your camera's more advanced functions. Even if you are an intermediate or experienced photographer, don't expect to just pick up all the new information at once, in one reading of a single book. (In fact, you wouldn't want to, as the never-ending journey of learning and mastering photography is a big part of what it's all about!) Try not to become frustrated if you don't quite understand something or aren't always getting the results you desire. Instead learn the controls, functions, settings, and concepts bit by bit, try them out in real life shooting situations, and return to this guide, to the *Nikon Z 7II / Z 6II Reference Manual*, and other photography books to address

3. MENUS and CUSTOM SETTINGS

3.1 Setting Up the Z 7II and Z 6II

The Menus and Custom Settings of the Nikon Z 7II and the Z 6II allow you to have greater, more precise control over how your camera functions. They are an important part of what make the Z 7II and Z 6II much more powerful and exacting tools than mid-level cameras, and they allow you to customize the camera to work for you, to work how *you* work. Using them you can also fine-tune settings and operations including white balance, metering, exposure, and autofocusing. I highly recommend that you carefully go through these menus and change the settings to the options that allow you to use the camera in the manner that works best for you and your shooting needs.

Some of the Menu items are only used when shooting, reviewing, or processing images, but several of them should be set up in advance. Below are explanations and suggested settings for the Menus and Custom Settings of the Nikon Z 7II and the Z 6II. I realize that reading this section at the beginning of this book presents a conflicting situation in that these menu items need to be explained first so that you can initially set up your camera, but you may not yet have the knowledge to fully understand all these menu items until you read through the rest of this guide! So don't get overwhelmed if you don't yet understand the settings or terminology used to describe the Menu and Custom Settings and their options. You will likely wish to return to them later after you have begun to better understand your camera and its controls and start to determine how you want to work.

And I understand that it is not as compelling to read through these lists of menu items as it is to read the more-flowing instructional text later in the book. But you will begin to learn much about the Z 7II and Z 6II as you patiently work through this Menus and Custom Settings chapter. As I mentioned in the **Introduction**, this section will often refer to upcoming chapters and sections, but it is not necessary for you to jump ahead. This is merely a "heads-up" that the menu item or function that you are currently setting up will be explained in detail later in the guide, in the applicable section of the text (such as **Autofocusing** or **Metering Modes**, etc.).

Also, if you don't yet understand some of the settings or why you might wish to change them, leave those on the default or recommended settings for now. If you have worked with a Nikon D500, D850, D750, D610, or D7500 body (or their recent predecessors) before using the Z 7II and Z 6II, you will find that several of these Menus and Custom Settings options are similar, and you may wish to continue to use most of the same settings that you have determined work best for you. However there are many new additions, functions, and options with the Z 7II and the Z 6II, and some items have moved to different menus. Note that the time and date will need to be set in the Setup Menu (*Time Zone and Date*) in order to access certain menu items, such as Time-Lapse Movie and Focus Shift Shooting.

3.2 Setup Guide Spreadsheet

In conjunction with this book, I have also created a comprehensive *Nikon Z 7II and Z 6II Menu Setup Spreadsheet*, with suggested settings for the Photo Shooting Menus, all of the Custom Settings, plus some shooting and exposure settings. It has complete and separate camera setup suggestions for different types of shooting, including:

General / Travel / Street
Landscape / Architecture
Action / Sports
Moving Wildlife / Birds
Studio / Portraits
Concert / Performance

Most all of the suggested settings on the spreadsheet are further explained in this section and throughout this guide, so it is best to use the spreadsheet hand-in-hand with the explanations in this book. And as you read through the Menus and Custom Settings, perhaps make notes of how you may wish to set them and adjust them for the different types of scenes and situations you photograph.

Please keep in mind that the reason the Nikon Z 7II and Z 6II offer so many menu items and customization options is that photographers have different needs and work in different ways, and it is best to determine which settings *you* need or prefer rather than to simply rely on the suggested settings from another photographer.

The *Nikon Z 7II and Z 6II Menu Setup Spreadsheet* Excel document can be downloaded directly from my website, at the link found just below.

I have also set up a *Nikon Z Experience* page on Facebook, to discuss Nikon mirrorless cameras, ask questions, and share images. Please feel free to join and contribute:

<https://www.facebook.com/groups/285030165630126/>

Printing instructions for the spreadsheet can be found here:

<http://www.fullstopbooks.com/setup-guides/>

The *Nikon Z 7II and Z 6II Menu Setup Spreadsheet* Excel document can be downloaded directly from my website here:

<http://docs.fullstopbooks.com/forms/Nikon-Z7II-Z6II-Experience-Menu-Setup.xlsx>

3.3 Playback Menu

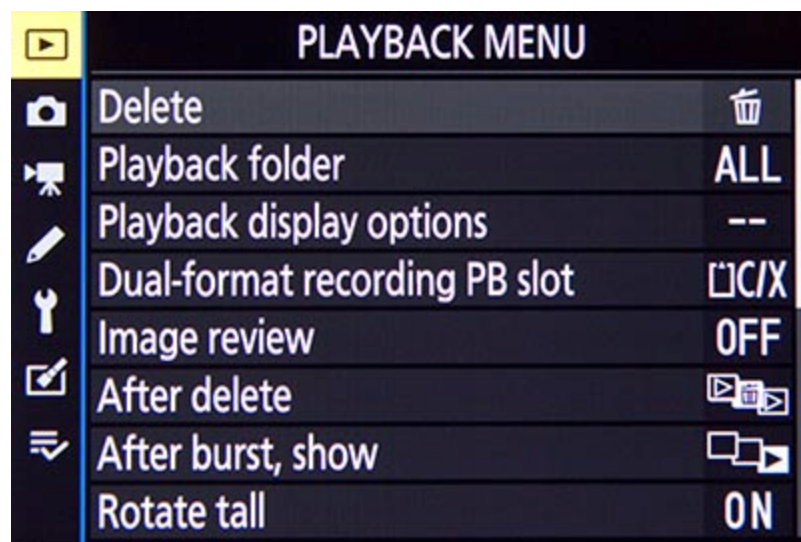


Figure 3.1 - Playback Menu

Delete

Use this to delete a single image or selected number of images (*Selected images*), all images taken on selected dates (*Images shot on selected dates*), or all images in the current playback folder on the selected memory card (*All images*), (see *Figure 3.2*). If selecting images, use the Multi Selector to navigate to the desired image, and press the Zoom-out Button to select it. You can continue to select multiple images, then press the OK Button to delete. Please know that many of the “secondary” types of button uses for menus and on-screen settings don’t need to be learned or memorized, as the camera will often display tiny icon reminders on the applicable menu or screen. For example in *Figure 3.2 - right*, the icons at the bottom of the screen indicate that pressing the Zoom-out Button will mark the image for deletion, pressing the Zoom-in Button will magnify the selected thumbnail for a closer look, and the OK Button will complete the operation.

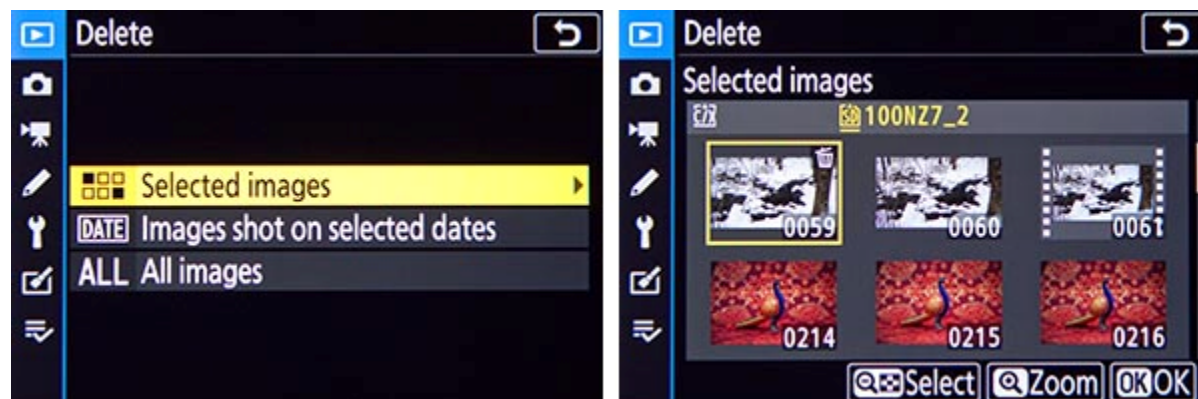


Figure 3.2 - Delete menu item (left), used to delete *Selected images* (right), *Images shot on selected dates*, or *All images* in the current folder. Notice the trash can icon on the thumbnail, which indicates the image is selected for deletion.

However, if you are deleting a single image or just a few, you can more easily do this using the Delete Button on the rear of the camera. If you have simultaneously recorded images onto both memory cards, such as with the *Backup* or the *RAW primary - JPEG secondary* option set for the *Secondary Slot Function* menu item, then you will need to choose to delete just the *Selected image* on the current memory card, or delete the selected image plus its copy on the other memory card (*Same images on C/X and SD*), (see *Figure 3.3 - left*). If you are deleting all the images on a card, it is better to use *Format Memory Card* (in the Setup Menu). Use a large enough memory card so that you don't need to worry about deleting images in camera while working, and instead it may be best to manage them on your computer after downloading all the images.



Figure 3.3 - Left: Choose to delete just the image on the current memory card, or the selected image plus its copy on the other memory card. Right: Press the *i* Button during image playback to access the “Choose Slot and Folder” item, to select the current playback memory card and folder.

Playback Folder

This setting is used to determine which images will be visible during Playback (see *Figure 3.4 - left*). Leave at the default setting (*All*), and all the images on the memory cards will be visible. If you are sharing memory cards between different cameras (which is not at all recommended as it may lead to file management confusion), this *All* setting can help prevent you from formatting a card that may have images from another camera still on it. If you just wish to view the images taken with the camera, select *NZ7_2* or *NZ6_2*. Note that this folder name will be affected if you rename the camera folder name using *Storage Folder > Rename* in the Photo Shooting Menu. If you just wish to view only the images in the current folder, select *Current*. You can select and create individual folders for organizing your photos in the *Storage Folder* item in the Photo Shooting Menu. Most users will likely wish to leave this set for *All* if sharing cards between cameras. During image playback, you can Press the *i* Button to access the *Choose slot and folder* item, to select the current playback memory card and folder (see *Figure 3.3 - right*).

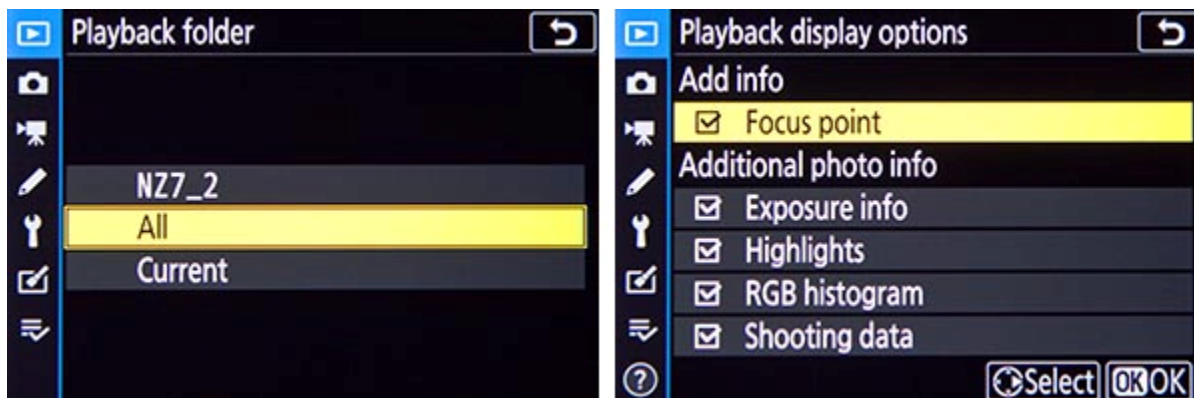


Figure 3.4 - Left: Playback Folder options, to determine which images are visible during image playback. Right: Playback Display Options, allowing you to select which information and displays are available to view during image playback.

Playback Display Options

During image playback on the rear Monitor you can cycle through various information displays in order to view your images either full screen or with various shooting data or histograms. This menu item is used to select which of these views will be available during playback (see *Figure 3.4 - right*). I recommend that you select all of the *Additional photo info* options, at least initially. Then after some use you can determine which information views you prefer and deselect the ones you don't need. You will view the various displays during image playback by pressing up or down on the Multi Selector.

Exposure Info will display a full screen image with the exposure settings. *Highlights* will display blinking areas to alert you of where the image has been overexposed, which can help you determine the proper exposure for the subsequent shots. *RGB histogram* will display histogram graphs of the various individual color channels to also assist you in determining proper exposure and help prevent the over-saturation of areas of specific colors. *Shooting data* will show additional information including the lens and focal length used, flash information, and Picture Control settings. This screen is not necessarily very informative immediately after taking the shot since you already know most of these settings, but can be helpful when later reviewing an image in-camera. *Overview* displays a thumbnail of the image along with the combined RGB histogram and shooting information (see *Figure 3.5*). This is perhaps the most important and useful information screen to use while shooting to help determine that you obtained the proper or desired exposure of an image. The *None* option will display just the image, full screen and without any shooting information, so that you can better view and inspect it. These displays will all be illustrated in the **Image Playback** section of Chapter 4, and all the different elements of information on these various information screens will be discussed throughout the guide.



Figure 3.5 - The Overview information display screen during image playback, showing a thumbnail of the image, the combined RGB Histogram, and shooting and file information.

The first item on the Playback Display Options menu, *Focus point*, will show you which focus point was used when capturing an image, and will thus verify if you properly focused where you intended (unless you recomposed after locking focus). It is that tiny red square or squares superimposed on your image when you view it on the rear Monitor, but will not be on the actual image (see Figure 3.6). It is most helpful for when you let the camera select the autofocus point, such as in action situations, and/ or when using an AF-Area Mode other than Single Point AF - and then you can see if the camera focused where you wished.

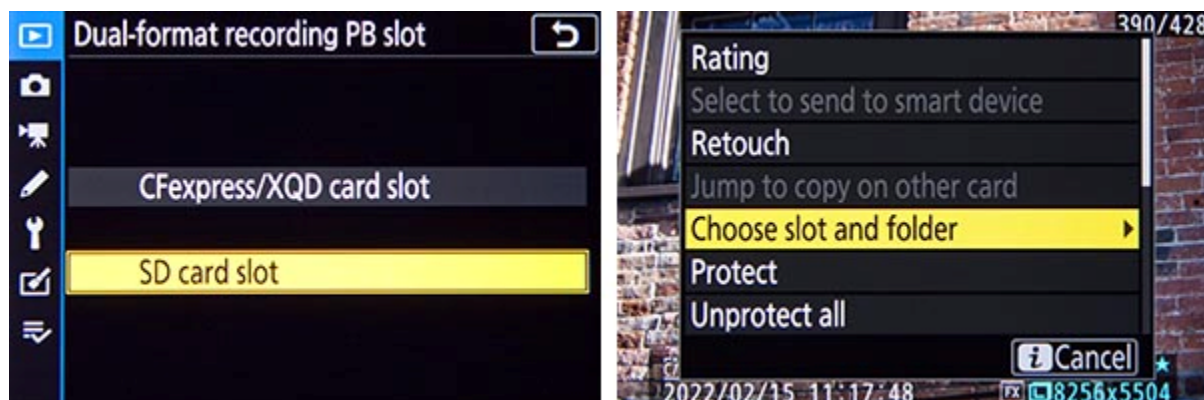


Figure 3.6 - File information view during image playback, with focus point display enabled to show which focus point was used for autofocus with this shot, indicated by the tiny red square located to the left of center, on the sled.

Keep in mind that if you selected a focus point, locked focus, and then recomposed the image before taking the shot, the image on your rear LCD will display which AF Point was used, but the displayed focus point will not actually be located in the same place on the image that the camera focused (before you recomposed), so it won't actually be helpful! This will be explained in the **Autofocusing** chapter of this text.

Dual-Format Recording PB Slot (Playback Slot)

In the Photo Shooting Menu, you will use the Secondary Slot Function menu item to determine how the second memory card slot is used. If you select the *RAW Primary - JPEG Secondary* option for that menu item, then this Dual-Format Recording PB Slot item is used to select which card slot will be used for playback, either the primary slot that stored the RAW images, or the secondary card slot that stored the JPEG images (see *Figure 3.7 - left*). During image playback, you can press the *i* Button, and use the *Choose slot and folder* option to select which card slot and image folder you are viewing (see *Figure 3.7 - right*).



*Figure 3.7 - Left: The Dual-Format Recording PB Slot option, to choose which memory card you will view during image playback if you are recording JPEG images to one card and (NEF) RAW images to the other. Right: During image playback, press the *i* Button to select which memory card and folder you wish to view.*

Image Review

Use this to set whether or not your images are immediately displayed in the electronic Viewfinder and / or on the rear Monitor after capturing them (see *Figure 3.8 - left*). If you typically review each image after taking it, turn this *On*. The electronic Viewfinder of the Z 7II and Z 6II enables review and playback images to be viewed in the Viewfinder, so that you can examine them without taking the camera from your eye. However, if you only want the Image Review images to appear on the rear Monitor and not in the Viewfinder, select *On (Monitor only)*. Then when you are making use of Live View shooting on the rear Monitor, you will view the image immediately after capture. However, if you are shooting through the Viewfinder and keep the camera to your eye, the image review will not appear on either display, and you can continue shooting. If you don't wish to review every image, turn it *Off* to help prolong the battery life, then hit the Playback Button when you wish to review an image in the Viewfinder or on the Monitor.

You will adjust how long the images are displayed during image review in Custom Setting c3 - *Power off delay*.

Note that if you turn this on, the image will of course be immediately displayed in the Viewfinder and / or on the Monitor. If you are still shooting you may start pressing the Multi Selector to begin to attempt to adjust the autofocus point for the next shot as you are still looking through the Viewfinder. But you won't be able to do this because your Multi Selector presses will be changing the image review display on the rear Monitor, not adjusting your AF Points! So be sure to turn this menu item *Off* if you typically continue to shoot without reviewing your images, and simply press the Playback Button when you wish to look at the photos.

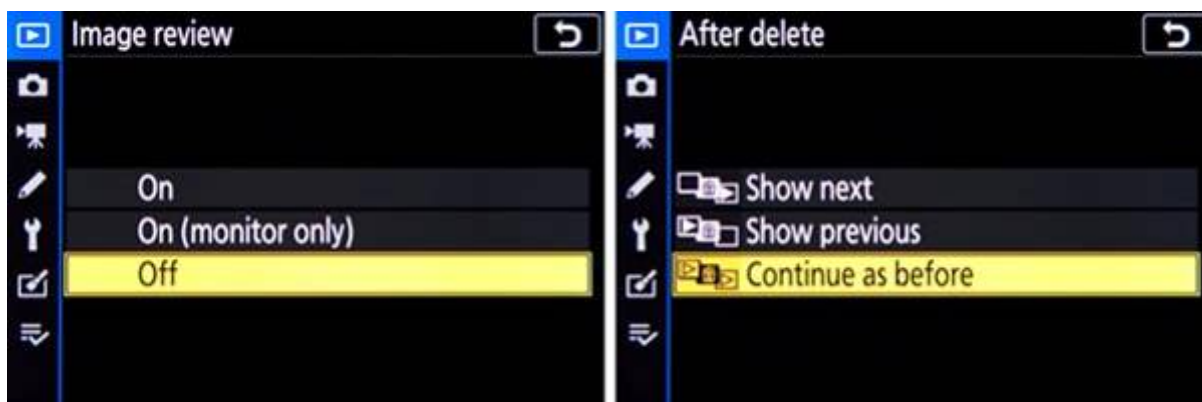


Figure 3.8 - Left: Image Review menu to enable image review in the Viewfinder and / or on the rear Monitor, immediately after capture. Right: After Delete menu item to choose which image is shown next after deleting an image during image playback.

After Delete

When reviewing photos during image playback, this menu item determines which image is shown on the rear Monitor or in the Viewfinder after an image is deleted - the next image (*Show next*), the previous image (*Show previous*), or the most intuitive option which is to set it on *Continue as before*, which will show the next or the previous image depending on which order you were just reviewing them (see Figure 3.8 - right).

After Burst, Show

You can take a continuous burst of images when using *Continuous High* or *Continuous Low* Release Modes. This menu item is to set which image is initially shown for image playback when the Playback Button is pressed immediately after taking a burst of continuous images. You can select to display the *First image in burst*, or the *Last image in burst* (see Figure 3.9 - left). This setting only functions when the *Image Review* menu item is turned *Off*. When image review is enabled, all the images in the burst will be automatically shown in succession.

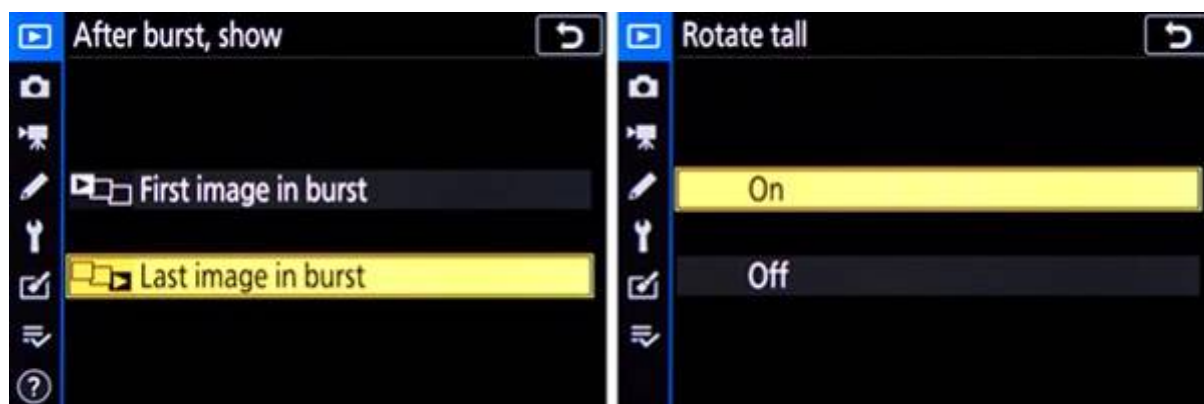


Figure 3.9 - Left: The “After Burst, Show” menu item, to set which image of a continuous burst is shown first during image playback. Right: Rotate Tall menu item for image playback, to display the images all oriented in the same direction, or to display vertically captured images “sideways” but larger.

Rotate Tall

This will automatically rotate your images to the desired orientation on the camera’s rear Monitor and Viewfinder during image playback (see *Figure 3.9 - right*). Turn this *On* to view all images in the same orientation during playback. If you prefer to see your vertically composed images (in portrait orientation) larger but “sideways” on your rear LCD, set this to *Off* (see *Figure 3.10*). Images will only be rotated during image playback and will not be rotated during image review immediately after taking a photo, as it is assumed you are then still holding the camera in the same orientation that you just took the photo.

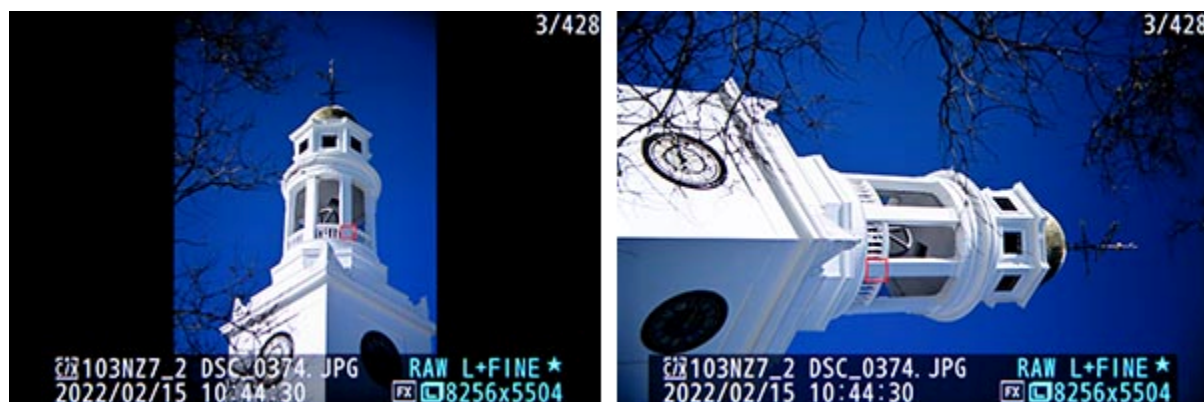


Figure 3.10 - Rotate Tall - Left: Use the Rotate Tall menu item for image playback to display your images all oriented in the same direction, by setting for “On.” Right: Or display vertically captured images “sideways” but larger with setting “Off.”

Copy Images

If two memory cards are inserted in the camera, this menu item can be used to copy images from one card to the other. First you will *Select source*, to choose the source card, either the *CFexpress/XQD card slot*, or the *SD card slot*. Then *Select images*, to choose the folder you wish to access (see *Figure 3.11 - left*). You can also choose to

a - Autofocus

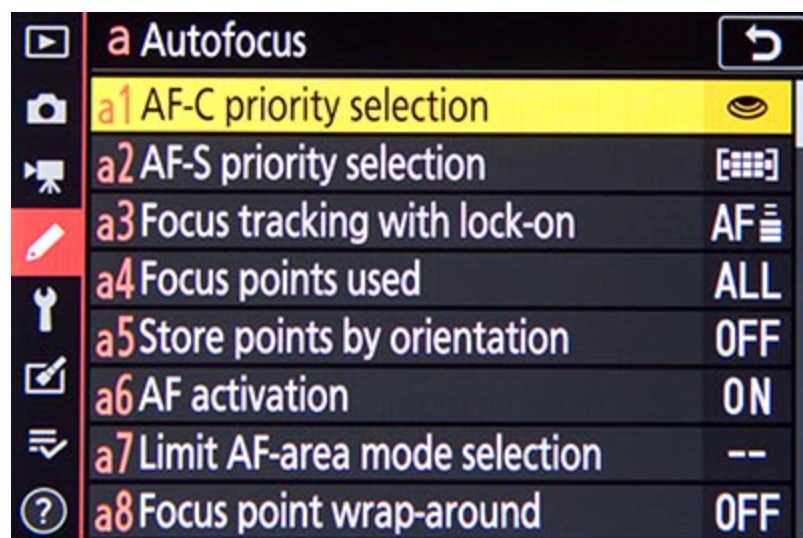


Figure 3.54 - Nikon Z 7II and Z 6II Custom Setting Menu.

a1: AF-C Priority Selection

This setting determines if attaining focus is top priority when you are working in Continuous AF Mode (AF-C Focus Mode), or if you just want the shots to be taken even if exact focus is not attained for each shot (see *Figure 3.55 - left*). It is designed for when you are capturing a burst of images using a continuous Release Mode. Specifically, when you press the Shutter Button, this setting determines if the images are taken immediately (*Release*) even if the first image is not yet in focus, or if the camera waits for focus to be attained before taking the photo (*Focus*). For example, if you are tracking a moving subject such as a runner or an animal, you may wish to just capture a rapid series of shots at all costs in order to ensure getting specific moments, and exact focus of each shot may not be the priority. Or you may wish to make sure the camera has properly focused each shot before the shutter is released. This however may cause a slight (perhaps millisecond) delay for each shot and the exact moments may be missed. If capturing the images at all costs and maintaining the maximum continuous frame rate are the priorities, set for *Release*. If exact focus of every image is your priority, at the risk of missing some shots and encountering small shutter release delays, set on *Focus*.

Both Nikon as well as experienced sports and wildlife photographers suggest that this be set for *Release* for many different types of sports and action situations. Their experience shows that the autofocus system is going to be able to focus for most all of the shots in a burst, and that it is not worth interrupting the rapid frame rate for the camera to briefly pause and acquire focus. And even when the camera may not be able to confirm focus, critical areas of the subject are likely still in focus, and thus the *Release* setting can result in more “keepers.” (However, you will need to try and keep the active AF Point located on the subject as you begin and continue the burst.)



Figure 3.55 - Left: AF-C Priority Selection options, to determine if shutter release and maintaining the maximum continuous frame rate are the priorities, or if exact focus of each shot is the priority. Right: The similar AF-S Priority Selection options, for when working in AF-S Focus Mode.

a2: AF-S Priority Selection

This is similar to *AF-C Priority Selection* above, except that this setting is for when you are working in Single AF Mode (AF-S Focus Mode), typically used when your subject is stationary, relatively still, or when you are not tracking a moving subject (see *Figure 3.55 - right*). Again, determine if getting the shot (*Release*) or exact focus (*Focus*) is your priority. Since AF-S Focus Mode is typically used with subjects that are not moving, it generally makes more sense to ensure focus is attained, thus you may wish to select *Focus* for this setting.

If *Focus* is selected for Custom Setting a2, then this setting coordinates with Custom Setting a6 - *AF Activation* if you have the camera set up for certain back-button focus techniques where you lock focus and recompose the framing of the shot before taking the photo using the AF-ON Button. The Custom Setting a6 options can allow you to make use of, or avoid, the “trap focus” set up. This will be explained in Custom Setting a6 - *AF Activation*, and in the **Trap Focus** and the **Back-Button Focusing** sections.

a3: Focus Tracking with Lock-On

The *Blocked Shot AF Response* setting determines how the autofocus system reacts to sudden, dramatic changes in the distance of the subject when you are working in AF-C Focus Mode and have the shutter button half-pressed or fully pressed, such as when another, closer object enters the frame and blocks your original subject. The camera can be set to wait a brief period of time before refocusing at the new distance with setting 1 (*Quick*), or wait a longer period of time with setting 5 (*Delayed*), or steps in-between, from 1 to 5 (see *Figure 3.56 - left*).

For example, you may be tracking a football player across the field when another player much closer to you temporarily comes between you and your intended subject. This setting will determine if and how quickly the camera then focuses on this nearer player, or if it continues to focus at the original distance, as the closer player passes through your field of view. If you do not wish for the camera to suddenly change focus to the

nearer player, set to a longer period such as 4 or 5. If you wish to switch focus to a closer or farther object, then set for a shorter period, 1 or 2, and focus will quickly change. Keep this option in mind with the various AF-C Focus Mode and AF-Area Mode configurations (explained in the **Autofocusing** chapter), as your preference will likely vary depending on your subject and situation. This setting doesn't just apply to blocked shots, but will also affect how quickly you are able to refocus at a different distance, as you are half-pressing the shutter button to track a moving subject, or fully pressing the shutter button to take a continuous burst. Sometimes you may not want the camera to quickly refocus on a closer or more distant subject, while other times you might.



Figure 3.56 - Left: Focus Tracking With Lock-On settings - When working in AF-C Focus Mode and tracking a subject, this setting determines how long the camera waits before refocusing on a subject at a different distance. Right: Focus Points Used, to choose if All Points are selectable, or if Every Other Point is selectable.

a4: Focus Points Used

This setting determines the number of autofocus points that are available for selection on the rear Monitor or in the Viewfinder (see *Figure 3.56 - right*). If you are manually selecting your focus point (as you typically should) you may find that it is quicker and easier, at least at first or in certain situations, to limit the number of AF Points to *Every other point*. But to take full advantage of the Z 7II and Z 6II autofocus system, you will want to make use of all of the selectable AF Points, as will be explained in the **Autofocus** chapter. If you prefer to have all the AF Points available for your selection, set this at *All*. If you set to *1/2 - Every other point*, the points available for selection will be reduced by three quarters, but all of the points will still be used by the camera in subject tracking (such as when working in AF-C Focus Mode along with one of the AF-Area Modes that uses multiple AF Points), so the camera is still potentially taking advantage of all the focus points of the autofocus system. When using *Wide-area AF (L)* Area Mode, the number of available focus points does not change.

a5: Store Points by Orientation

This can be used to have a specific AF Point be automatically selected when you hold the camera in a certain orientation (see *Figure 3.57*). If you set this for *Off*, the current AF Point that you have selected will remain the active AF Point when you change

camera orientation, as you would generally expect. However, if you set this for *Yes*, the camera will return to the AF Point last selected when the camera was in that orientation.

So, for example, set this for *Yes*, then hold the camera in the standard orientation and select a far-right AF Point. Then position the camera vertically with the grip side up and select a far-left AF Point. When you return the camera to the standard horizontal orientation, the camera will return to the far-right point as the active AF Point. When you return the camera to the grip-up orientation, it will jump again back to the far-left point.

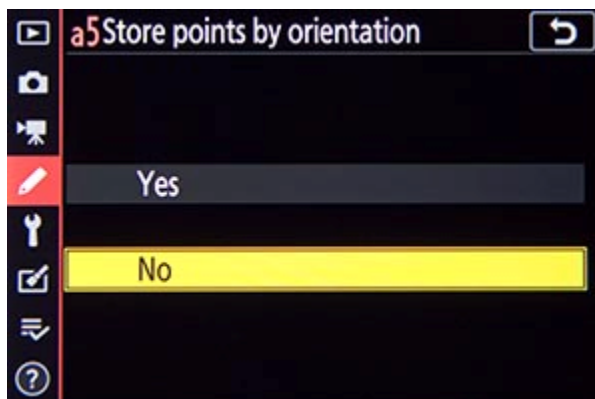


Figure 3.57 - Store Points By Orientation, to choose if the camera remembers the last focus point and/or AF-Area Mode used when the camera is held in a specific orientation.

The camera will recognize three different orientations: horizontal, vertical with the camera grip side of the camera up, and vertical with the camera grip facing down. This can be handy in situations such as when you are taking portraits and you switch between horizontal and vertical camera orientation, yet you want an AF Point at the relative “upper-right” position to remain selected, near where you have located the model’s face.

However if you enable this option and then use your camera later and forget that you have it set this way, the AF Points will seem to be acting extremely erratic as you change camera orientation, until you remember to set this back to *Off*.

a6: AF Activation

This is used to determine which button or buttons can be used to initiate autofocus. By default the camera is set to *Shutter/AF-ON* and thus either the Shutter Button can be half-pressed or the rear AF-ON Button can be pressed to start autofocus. If you wish to disable the autofocus function from the Shutter Button, set for *AF-ON only* and then you will need to press the rear AF-ON Button to focus on your subject (see *Figure 3.58 - left*). This *AF-ON only* option is used for a technique called back-button focusing (Section 5.6 - **Back-Button Focusing**). This technique can allow you to separate the exposure and the autofocus functions to two different buttons, can be used to lock focus at a certain distance while you recompose slightly and take a series of photos when working in AF-S Focus Mode, or can be used to start and stop focus tracking

when working in AF-C Focus Mode. It can also enable you to take advantage of a technique called trap focus (Section 5.7 - **Trap Focus**).

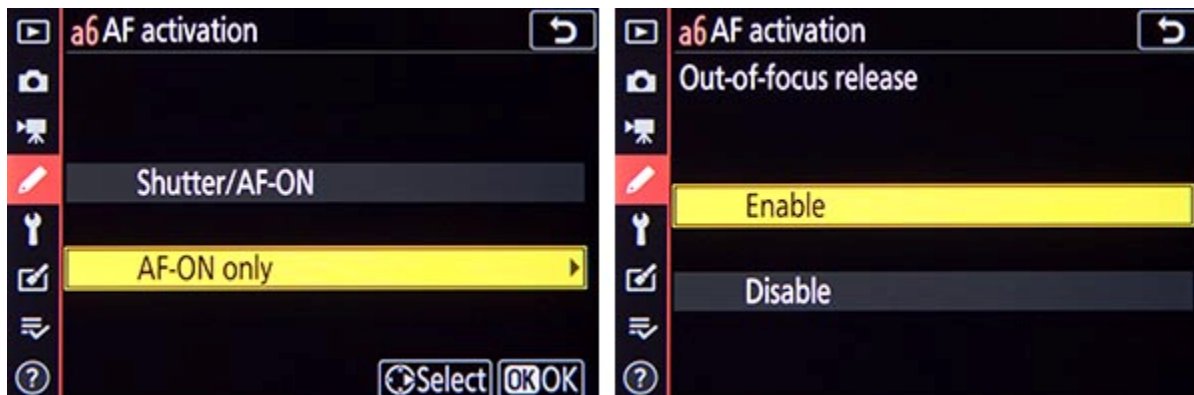


Figure 3.58 - Left: AF Activation menu, to choose if both the Shutter Button and the AF-ON Button will activate autofocus, or just the AF-ON Button. Right: If “AF-ON Only” is selected, press right to access the “Out-of-focus release” sub-menu. Typically set this for *Enable*, unless you wish to make use of trap focus.

If you select the *AF-ON only* option, press right to access a sub-menu which allows you to enable or disable *Out-of-focus release* (see Figure 3.58 - right). If the *Out-of-focus release* option is set for *Enable*, then the camera can take an image when the Shutter Button is fully pressed, even if the subject is not in focus. If set for *Enable*, you will obviously need to remember that you are using back-button focus and need to focus with the AF-ON Button, otherwise you could be pressing the Shutter Button and capturing images, but the camera will not have focused.

If set for *Disable*, then the camera will not take an image when you press the Shutter Button if the subject at the active AF Point is not in focus. You will need to be sure to first focus the camera using the AF-ON Button. This setting works in conjunction with Custom Setting *a1: AF-C Priority Selection* and *a2: AF-S Priority Selection*, which each must be set for *Focus* for this *Out-of-focus release > Disable* setting to apply. It also does not apply to *Auto-Area AF-Area Mode*. This *Disable* setting is used for a technique called trap focus, which is discussed in Section 5.7 of this guide, and should not be used until you fully understand how it works.

So if you are using the *AF-ON only* option, for back-button focusing, I suggest you leave the sub-menu for *Enable*, unless you wish to make use of trap focus. While this introduces the possibility of taking out of focus shots if you fail to focus first with the AF-ON Button, it also eliminates the issue where you are pressing the Shutter Button to take a single image or burst, but the shutter is not being released.

a7: Limit AF-Area Mode Selection

This setting is used to enable or disable the different autofocus AF-Area Modes so that you will be able to choose from them all, or so that you can limit the number of modes available for selection if you do not ever wish to use some of them. The available modes

include *Pinpoint AF*, *Dynamic-Area AF*, *Wide-Area AF (S)*, *Wide-Area AF (L)*, *Auto-Area AF*, and the people and animal face and eye detection options for *Wide-Area AF* and *Auto-Area AF*. You cannot deselect *Single-Point AF* (see *Figure 3.59 - left*).

When setting this menu item, press up and down on the Multi Selector to highlight the desired mode, then press right on the Multi Selector to select or deselect it. You may wish to enable all of them at first and experiment with the different modes, and then later possibly disable the ones you find that you do not wish to use. That way when you are later quickly selecting between the different AF-Area Modes, you won't have to dial through all the options to get to the mode you desire. For example, when taking bird shots, you may only wish to quickly switch between *Single-Point AF*, *Dynamic-area AF*, and *Auto-Area AF*, and don't want to be slowed down by having to click through the other Area Modes. The **Autofocus AF-Area Modes**, the differences between them, and their uses will be explained in Chapter 5 - **Autofocusing**.



Figure 3.59 - Left: Limit AF-Area Mode Selection menu, which allows you to limit the selectable AF-Area Modes to just the ones you use, which can save time during shooting as you “scroll” through the various modes when changing to your desired mode. Right: Focus Point Wrap-Around, to choose if AF Point selection stops at the edges or not.

a8: Focus Point Wrap-Around

This determines if the focus point selection will “wrap around” to the other side of the Viewfinder or Monitor when you reach an edge (see *Figure 3.59 - right*). In other words, if you are selecting your AF Point (as I will explain, you should be doing much of the time) and you reach an AF Point on the far right, when you click right again, do you want to “wrap around” to a focus point on the far left (*Wrap*), or do you wish to stop at the edge and not continue to the other side (*No Wrap*)? I do not like my selection wrapping around to the other side, since it is unlikely the subject suddenly goes from the right side of the frame to the left side, or from the top to the bottom, so I suggest setting this for *No Wrap*. But if you find it quicker to select your focus points by wrapping around from one side to the other, or from top to bottom, change this to *Wrap*.

5. AUTOFOCUSING

5.1 Using Autofocus

One of the essential steps in taking successful and sharp photos is controlling where and how the camera autofocuses. The versatile and customizable autofocus systems of the Z 7II and Z 6II are a major part of what makes them such powerful cameras, and in any Exposure Mode you can, and should, take control of the autofocus system. The autofocus system includes the autofocus related controls (see *Figure 5.1*), the Focus Modes (such as *Single AF* (AF-S) and *Continuous AF* (AF-C), the focus points and AF-Area Modes (such as *Single-Point AF*, *Dynamic-Area AF*, and *Wide-Area AF*), and the autofocus related menu and Custom Setting items which customize how the AF system works. You will select a Focus Mode generally based on whether the subject is still or moving, and select an AF-Area Mode based on where and how you want the camera to locate and focus on your intended subject - ranging from a single point, to a Dynamic-Area or Wide-Area, to all the available points. You can set the Focus Modes and AF-Area Modes in a variety of combinations based on what and how you are shooting.

The autofocus system of the Nikon Z 7II and Nikon Z 6II differs from what you may be used to with a dSLR camera. The AF system makes use of on-sensor phase-detection AF for quick autofocus, as well as contrast-detection AF for additional fine-tuning and accuracy. Since the AF system makes use of the sensor itself to focus, properly focused images (using lenses fully compatible with the Z 7II / Z 6II AF system) should always be in-focus, without back-focus or front-focus issues. This also allows for AF Points to be located across nearly the entire frame. So rather than the 55 selectable AF Points of the D850, for example, the Z 7II boasts 493 AF Points covering 90% of the frame. The Z 6II offers 273 AF Points also covering 90% of the frame.

With such a large number of AF Points, the AF Area Modes will also differ from a dSLR. While there is still the *Single-Point AF* and *Dynamic-Area AF* Area Modes, there are also the *Pin-Point AF*, *Wide-Area AF (Small)* and *Wide-Area AF (Large)* Area Modes. The Z 7II and Z 6II offer the new *Wide-area AF (L-people)* and *Wide-area AF (L-animals)* modes, with eye and face detection. The Z 7II and Z 6II **do not** have the *3D-Tracking AF* Area Mode that you may know from a Nikon dSLR, however the *Auto-area AF* modes, also with available face and eye detection for people and animals as *Auto-area AF (people)* and *Auto-area AF (animals)*, can be used in a somewhat similar manner to select and track a subject throughout the frame along with AF-C Focus Mode.

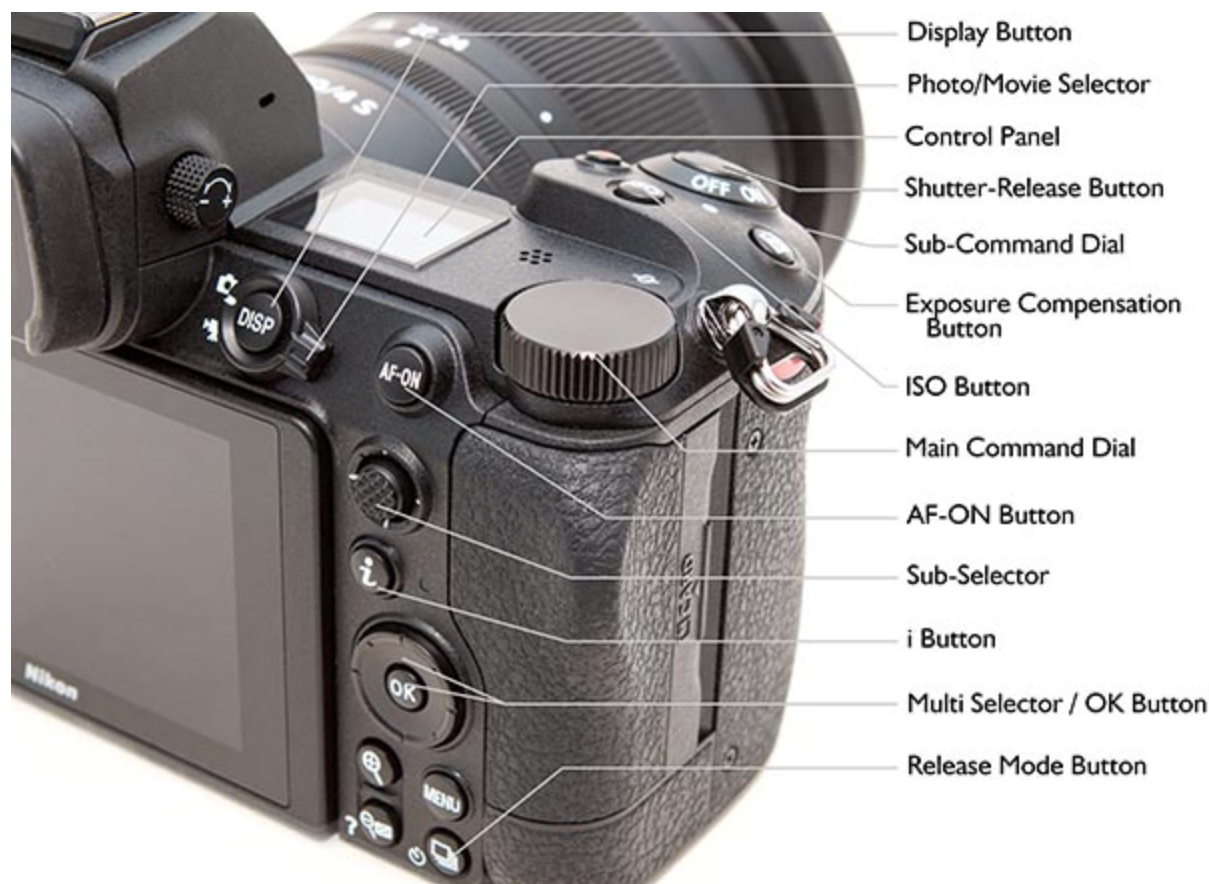


Figure 5.1 - Autofocus controls and other shooting-related controls of the Nikon Z 7II and Z 6II.

If you allow the camera to autofocus by automatically choosing its own focus point(s), such as when using *Auto-area AF* or *Wide-area AF (L) Area Modes*, it typically focuses on the closest object or subject. This may or may not be what you want to focus on, so you should select or at least narrow down where the camera focuses using the *Single-Point AF* or the *Dynamic-Area AF* group of points. By doing so you are telling the camera exactly where to autofocus or where to look to find a moving subject to track. For example, if you are capturing an image of a bird in a tree the camera has no idea you want the autofocus system to zero in on the bird so that it is in sharp focus, and not on the branches or leaves near it, or perhaps even on the leaves closer to you.

If you are photographing people or animal subjects (dogs and cats), and their eyes or faces will be visible, you can take advantage of *Wide-area AF (L-people)* and *Wide-area AF (L-animals)*. Locate the focus area over the subject, and verify that the camera is focusing on the desired face or eyes before capturing your image. This will greatly assist you in focusing on these subjects without having to precisely position or quickly relocate a single AF point or Dynamic-Area of points.

Be sure to read the **Menus and Custom Settings** section first to make sure your camera is properly set up to make use of all the autofocus points, and various other

recommended autofocus settings. Most of these settings are in the Custom Setting a: *Autofocus* menu.

Autofocus works in part by looking for contrast so try to focus (locate your focus point as you view it in the Viewfinder) on a texture or a detail with a pronounced line or some amount of contrast between light and dark. It may not be able to focus on a large area of consistent color - such as a white wall or clear blue sky, or even a uniformly colored and illuminated shirt - or on a subject or scene that is too dark. It can be disrupted by regular patterns and fine detail, or confused when looking through close objects to objects farther away, such as looking through a screen or fence. And it sometimes fails to work well in highly contrasting or dim light.

Because the Z 7II and Z 6II are mirrorless cameras with electronic Viewfinders and without separate AF sensors, autofocusing when working in Live View, in Movie Live View, and through the Viewfinder will all be similar.



Figure 5.2 - Simulated view of the Nikon Z 7II Viewfinder, showing the location of all 493 AF Points. Note that you will not actually see all 493 AF Points in the Viewfinder or on the Monitor, only the active point or area. The Z 6II has 273 AF Points. Background image shown at 75% opacity to better see Viewfinder elements.

When discussing autofocus, I will assume that Custom Setting a6 - *AF Activation* is set for *Shutter/AF-ON*, so that both the Shutter Button and the AF-ON Button can be used to initiate and/or lock autofocus. The exception to this is when I discuss **Back-**

Button Focusing and **Trap Focus**, where I will specify that Custom Setting a6 be set for *AF-ON only*, so that only the rear AF-ON Button is used for focusing and not the Shutter Button.

Before diving into the autofocus system, I'll briefly explain how autofocus point selection works. You will select your desired autofocus point (also called focus point or AF Point) using the Multi Selector thumb pad, as you look through the Viewfinder. If you set Custom Setting f3 - *OK Button* for *Select center focus point*, you can use the OK button to quickly select the center AF Point. You can also use the Sub-Selector joystick to select the AF Point. And in Custom Setting f2 - *Custom Controls*, you can assign the Sub-Selector Center press to the *Select center focus point* option so that you can also press this control to select the center AF Point.

Use the *Focus Mode* item of the Photo Shooting Menu or the *i* Menu to set the Focus Mode to *AF-S* (Single AF), and use the *AF-Area Mode* item of the Photo Shooting Menu or the *i* Menu to set the AF-Area Mode to *Single-Point AF*. If you have assigned one of the Fn Buttons to the *AF Mode/AF-Area Mode* option, you can press that button and set the Focus Mode to *AF-S* (Single AF) using the rear Main Command Dial, and set the AF-Area Mode to *Single-Point AF* using the front Sub-Command Dial. Look at the rear Monitor or Viewfinder to view the settings as you change them. The Fn2 Button is assigned to this function by default.

1. Set the Exposure Mode to P (Program), or to the mode of your choice if you are familiar with them.
2. Tap the Shutter Button with a half-press to wake up the camera and start the exposure metering.
3. Looking through the Viewfinder or at the Live View scene on the rear Monitor, use the Multi Selector thumb pad or Sub-Selector joystick to select the focus point that is nearest to where you want to focus.
4. Place that point over your intended subject.
5. Press and hold the Shutter Button halfway down and see that point turn green. You have locked the focus.
6. Keeping the Shutter Button pressed halfway, recompose if necessary, and take the shot by fully pressing the Shutter Button.

You can also press and hold the AF-ON Button to focus, and then keep it fully pressed as you recompose and then press the Shutter Button to capture the image.

If the camera does not take the photo, the camera may not be finding something to focus on, may not be finding enough contrast to lock in on, the lighting may be too dim, or you may be too close to your subject for the lens to focus.

Although some people are in the habit of using only the center focus point, there are reasons to make use of all the focus points and not just the center one all the time,

which will be discussed. It may sound difficult to manually select the focus point each time, but it is actually very quickly done and will become instinctive. You may even start to set your AF Point as you approach a scene before even bringing your camera to your eye, using your thumb on the Multi Selector or Sub-Selector. For example, press right multiple times so that when you bring the camera to your eye, a far-right AF Point is already selected. And remember that Custom Setting a4 - *Focus points used* allows you to limit the number of selectable points, to perhaps make this process more manageable at first.

Touch Shutter

The touch screen capability of the rear Monitor allows you to tap the screen to just focus on the subject or desired part of the scene (*Touch AF*), to both focus and release the shutter (*Touch shutter/touch AF*), or to merely position the focus point but not focus or release the shutter (*Position focus point*). Or you can turn this feature off. To enable this feature, tap the Touch Shutter icon, located on the left side of the Live View screen. Tap it repeatedly to choose your desired setting (see *Figure 5.3*). If *Touch shutter/touch AF* is enabled, touching the screen will position the AF Point and focus at that area, and removing your finger will release the shutter. The *Touch AF* setting will simply select the area of focus and will autofocus when you touch the screen, but will not release the shutter. The *Position focus point* setting will select a focus point, but will not focus or capture the image, you will need to use the Shutter Button or AF-ON Button to focus, and press the Shutter Button to capture the image. The *Off* setting will disable this feature.



Figure 5.3 - Repeatedly tap the Touch Shutter icon (on the left side of the screen) to enable its different options. Left: Here it is being set for “Touch shutter/touch AF”, which will enable you to tap the screen to focus and release the shutter. Right: The “Touch AF” setting will allow you to focus by tapping the screen, but the shutter will not be released. The “Position focus point” option will merely locate the AF Point, but will not focus or release the shutter.

You can use the Touch Shutter with the various AF-Area Modes, to locate the AF Point or area, select the desired face, or select the desired subject for tracking. To select a face or eyes, first set the AF-Area Mode for *Wide-area AF (L-people)* or *(L-animals)*, or

for *Auto-area AF (people)* or *(animals)*. Then when you touch the Monitor to focus, the camera will focus on the face or eye closest to that point. If *Touch shutter/touch AF* is in use, you can still use the Shutter Button to take the image, and you will need to use the Shutter Button if you are using one of the Continuous Release Modes, as the Touch Shutter will only take one image.

5.2 Focus Modes

The Z 7II and Z 6II have two different Focus Modes to choose from for still image shooting, *AF-S* and *AF-C*. You will typically make your selection based on if your subject is still, or if it is moving and you wish to track its movement and remain continuously focused on it. There is an additional Focus Mode available for video shooting, called *AF-F*, which will be explained. The cameras also have several different autofocus *AF-Area Modes* (discussed in the next section) to specify how many of the focus points are active and how they follow or track a moving object. You can set these two functions in various combinations. First the Focus Modes will be explained. Select the Focus Mode in the Photo Shooting Menu, or via the *i* Menu. Using the *i* Menu, highlight the Focus Mode item, and press the OK Button to view and change the setting, as you view it on the rear Monitor or in the Viewfinder (see *Figure 5.4*). Or highlight the item, and turn the rear Main Command Dial to change the setting directly on the screen (see *Figure 5.5 - left*). If you have assigned one of the Fn Buttons to the *AF Mode/AF Area Mode* option, you can press that button and rotate the rear Main Command Dial to change the Focus Mode setting, while viewing the settings on the rear Monitor or in the Viewfinder. By default, the Fn2 Button is assigned to this function. The front Sub-Command Dial can then be used to change the *AF-Area Mode* (see *Figure 5.5 - right*).



Figure 5.4 - The Focus Mode setting can be found on the i Menu (left). Highlight that icon and press the OK Button to view and change the setting on the rear Monitor or in the Viewfinder (right).



Figure 5.5 - Left: Or after highlighting the Focus Mode icon on the *i* Menu, turn the rear Main Command Dial to view and change the setting. Right: If you assign one of the Fn Buttons to the "Focus Mode/AF-Area Mode" option, you can press that button and turn the Command Dials to view and change those settings on the rear Monitor or in the Viewfinder. Use the rear Main Command Dial to change the Focus Mode, as indicated on the screen.

Single AF (AF-S)

Use this mode when your subject is stationary, or is still and not going to move. It can also be used if your subject is not going to move very much, or if the distance between you and the subject is not going to change between the time you lock focus, recompose, and take the shot. Lock focus on the subject by half-pressing the Shutter Button (or pressing and holding the AF-ON Button) and recompose if necessary. This mode can even be used for moving people or subjects if you quickly take the shot after establishing or locking focus. When using AF-S, you can select from these AF-Area Modes: *Pinpoint AF* where you select a small focus point, *Single-Point AF* where you select a focus point, *Wide-Area AF (S)* or *Wide-Area AF (L)*, (*L-people*), or (*L-animals*) where you select a focus area, or *Auto-Area AF*, *Auto-Area AF (people)* or (*animals*), where the camera selects the AF Point(s) for you. The *Wide-area AF* and *Auto-Area AF* Focus Mode with *people* and *animal* detection will also take advantage of face and eye detection, and will select a face or eyes within that area. For still subjects, I suggest you nearly always select an individual *Single-Point AF* point and position it at the subject, so that the camera autofocuses exactly where you want it to. Or when photographing people and animals, take advantage of the face and eye detection area modes, then ensure that the camera is focusing on the desired face or eye before taking the photo.

Focus on your subject by pressing the Shutter Button halfway. The active AF Point will turn from red to green, and the camera will beep if you have the Beep function enabled. Continue to press the Shutter Button all the way to take the shot. If you half-press the Shutter Button to lock focus on your subject, the camera will remain focused at that distance as long as you keep half-pressing the Shutter Button. Or you can press and hold the AF-ON Button to lock focus. You can recompose the shot as you wish and then fully press the Shutter Button to take the photo. Again, if the camera does not take the photo, the camera may not be finding enough contrast to focus on, you may be too

close to your subject for the lens to focus, or the lighting may be too dim for the AF system to work well.

However, if you are photographing a subject that is approaching or receding from you at a relatively constant rate, or photographing fast or erratic or unpredictably moving subjects, or photographing sports, action, or wildlife you will usually want to use Continuous AF (AF-C) Focus Mode.

Continuous AF (AF-C)

This mode, used in conjunction with the various AF-Area Modes, can help you to capture images of action and motion (see *Figure 5.6*). To take full advantage of this mode you will need to also understand the AF-Area Modes, as described in the **Autofocus AF-Area Modes** section next. Continuous AF mode is used to track and maintain continuous focus on moving subjects, and is ideal for capturing sports and wildlife including birds. If the subject is moving towards you or away from you, the camera will keep evaluating the focus distance. And if the subject is moving from side to side or throughout the frame, the camera can track it as it passes from one AF Point to other ones (depending on the selected AF-Area Mode). Custom Setting a3 - *Focus tracking with lock-on > Blocked shot AF response* will even allow you to tell the camera exactly how fast to react to changes in focus distance, in order to refocus on a subject at a different distance, such as new subjects that come into the frame or that pass between you and your subject.

You first need to select which focus point the camera uses to start following the subject, place that point over the subject, and press the Shutter Button half-way. Or you can press and hold the AF-ON Button. Then as long as you keep the selected AF Point on the subject and the Shutter Button pressed half-way or the AF-ON Button pressed, the camera will continuously evaluate the focus distance so that the subject will be in focus when the shot is taken. If the subject is going to be difficult to follow or keep located as a single AF Point, you can use the *Dynamic-Area AF* Area Modes so that the surrounding points will help retain focus if the subject temporarily moves away from the selected focus point. Or you can use one of the *Wide-Area AF* Area Modes so that an area of AF Points will be used to focus-on and track the subject. If the subject will be moving across your field of view as you keep the camera relatively still, you can make use of the *Auto-Area AF* area mode to follow a selected subject.

If you wish to hold the camera relatively still as the camera tracks a selected subject throughout the frame, you can make use of *Subject-Tracking AF*. You will set the AF-Area Mode for one of the *Auto-Area AF* options, press the OK Button to initiate focus tracking, position the tracking target over the subject, then press OK again to begin tracking that subject. Press the Shutter Button to capture the image, or press the Zoom-Out Button to exit tracking. When working in *AF-C* Focus Mode, you can also half-press and hold the Shutter Button, or press and hold the AF-ON Button to initiate subject tracking. You will need to continue pressing the button for tracking to continue, then fully-press the Shutter Button to capture the image.



Figure 5.6 - Continuous AF (AF-C) Focus Mode can be used to track and retain focus on a moving subject, such as this blue heron taking flight. Shutter speed 1/1600, Aperture f/4.0, ISO 640.

This subject tracking of AF-C will even work in conjunction with continuous shooting. If you keep the Shutter Button fully pressed and continue to take photos, even at 10 (Z 7II) or 14 (Z 6II) frames per second, the camera will (ideally) keep focusing on the moving subject. As you can imagine, this is effective for tracking a player running across a field, a dog running toward you, a toddler in action, or a bird moving across the frame. Note that when shooting with Continuous High or Continuous High (extended), not every shot may be in sharp focus as the camera sometimes can't keep up and accurately predict the subject's speed or location.

While other Nikon models have an AF-A Focus Mode that automatically switches from AF-S to AF-C if a still subject starts moving, the Z 7II and Z 6II do not offer this option. However, switching between AF-S and AF-C is sometimes useful, such as photographing a still bird that suddenly takes flight. In this type of situation, you will not have a chance to switch your camera from AF-S to AF-C. The solution to this is to use AF-C and back-button focusing. This is sometimes also referred to as AF-ON Button Focusing. To do this, assign Custom Setting a6 - AF Activation to the *AF-ON only* setting, which means the Shutter Button will no longer perform any autofocus functions, only the AF-ON Button will (see *Figure 5.7 - left*). When choosing this *AF-ON only* setting, press right to access the *Out-of-focus* sub-menu, and set for *Enable* (see *Figure 5.7 - right*). (The *Disable* setting can be used for the trap focus technique.) Then

What Readers are Saying About Doug's Previous Guides:

A well written, professional helpful guide - Brilliant, just what I was looking for! A manual that was exciting, clear to follow, had examples and was used by a professional who gave just the right amount of technical with explanations of why you use those settings, when to use those settings, all properly explained. The book is a revelation, well thought through and well written.
-R.D.C.

All I Need - I have been using Nikon dSLR cameras for many years. In all this time I have never come across a publication which complements the rather soulless and complex user manual so well. Your excellent work is all I need to exploit the potential of this amazing dSLR.
-Martin D.

Really Practical and Tremendously Helpful - Readers of this e-book can expect to benefit from a more rewarding photographic experience using this superb camera, and be better able to exploit its potential to match their personal objectives and photographic style. Highly recommended.
-M.M.

This is the most helpful manual I've ever used. No serious Nikon camera user should be without this. I find it very easy to find what I need and even easier to understand.
-S.B.

Really Focuses on the Why - I found the Nikon manual good for understanding how to set things up but not much on the why - this book really focuses on the "why."
-Benoit A.

It's clear, concise and gets to the heart of the camera's multiple and often confusing options. Very highly recommended - for experienced user and beginner alike.
-G.S.A.

A Must-Have Accessory - What a great addition to my bag. This is a well written, full body of work that explains, in plain English, how to get the most out my new camera. Doug provides the knowledge and experience to bring you to the next level. I look forward to learning more every time I open the book.
-Steven

A Pro Right There with You - If you want to get the camera up and running with the feeling of a pro right there with you then I would strongly recommend it. His explanation is first class and he explains how various custom settings are related to each other. All in all a great read. Camera in one hand and reader in the other and dig in.
-Tim S.

Purchase Nikon Z 7II / Z 6II Experience at:
<http://www.fullstopbooks.com/nikon-z7ii-z6ii-experience/>

About the Author



Douglas Klostermann is a travel, culture, and humanitarian photographer, as well as the author and publisher of *Full Stop* e-book camera guides including the best-selling *Nikon D850 Experience* and *Nikon D7500 Experience*. He has photographed for numerous organizations in the United States and Latin America, been recognized by the *United Nations Development Programme* for his humanitarian photography, and been published in magazines, books, and websites including *Conde Nast Traveler*, *Sherman's Travel*, *NationalGeographic.org*, *South American Explorer*, and *Viva Travel Guides*. Doug is a member of the North American Nature Photography Association (NANPA).

Learn more about photography techniques and equipment on his blog *Picturing Change* at <http://blog.dojoklo.com/>

View his photography at www.dojoklo.com

View his e-books at <http://www.fullstopbooks.com>

Follow him on Twitter at [@dojoklo](https://twitter.com/dojoklo)

Join his *Nikon Z Experience* Facebook page and participate in the conversations at <https://www.facebook.com/groups/nikonz7z6z5>